




CHASSIS

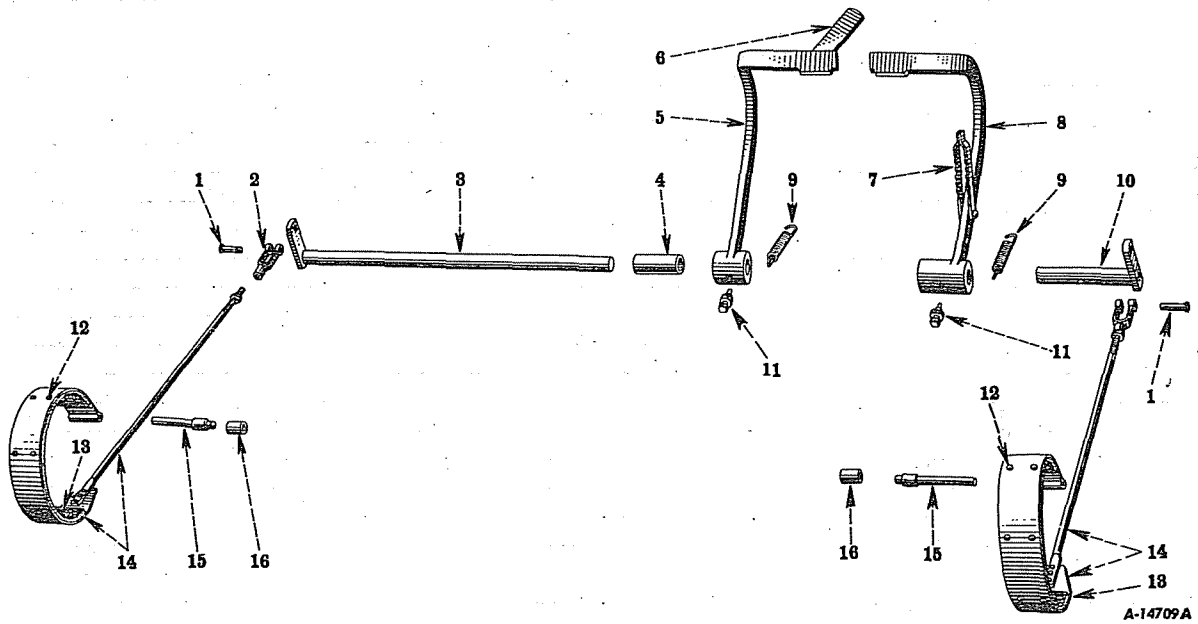

Reference numbers only are shown in illustration. Use I H part numbers in ordering.

FOOT BRAKES

1	39 374 D 103 373	PIN, BRAKE ROD ADJUSTABLE YOKE PIN, COTTER, 3/32 x 3/4"	2 2
2	104 037	YOKE, ADJUSTABLE, BRAKE ROD	2
3	351 487 R21 103 346 103 386	SHAFT, w/LEVER, BRAKE, L.H. WASHER, PLAIN, 3/4" PIN, COTTER, 1/8 x 1-1/4"	1 1 1
4	351 488 R1	SPACER, BRAKE SHAFT AND LEVER, L.H.	501 TO 17527 1
5	350 991 R11	PEDAL, BRAKE, ASSEMBLY, L.H. (COMPOSED OF -	1
		1 BLOCK \$ 350 994 R1	1 RATCHET 350 995 R91
		1 HUB \$ 350 992 R1	1 RIVET 104 083
		1 LATCH 350 993 R1	1 RIVET 104 086)
		1 PEDAL \$ 350 991 R1	
6	350 993 R1 104 086	LATCH, BRAKE RIVET, S., RD-HD., 1/4 x 1-1/8"	1 1
7	350 995 R91 104 083	RATCHET, BRAKE RIVET, S., RD-HD., 1/4 x 3/4"	2 2
§ - NOT SERVICED SEPARATELY			